
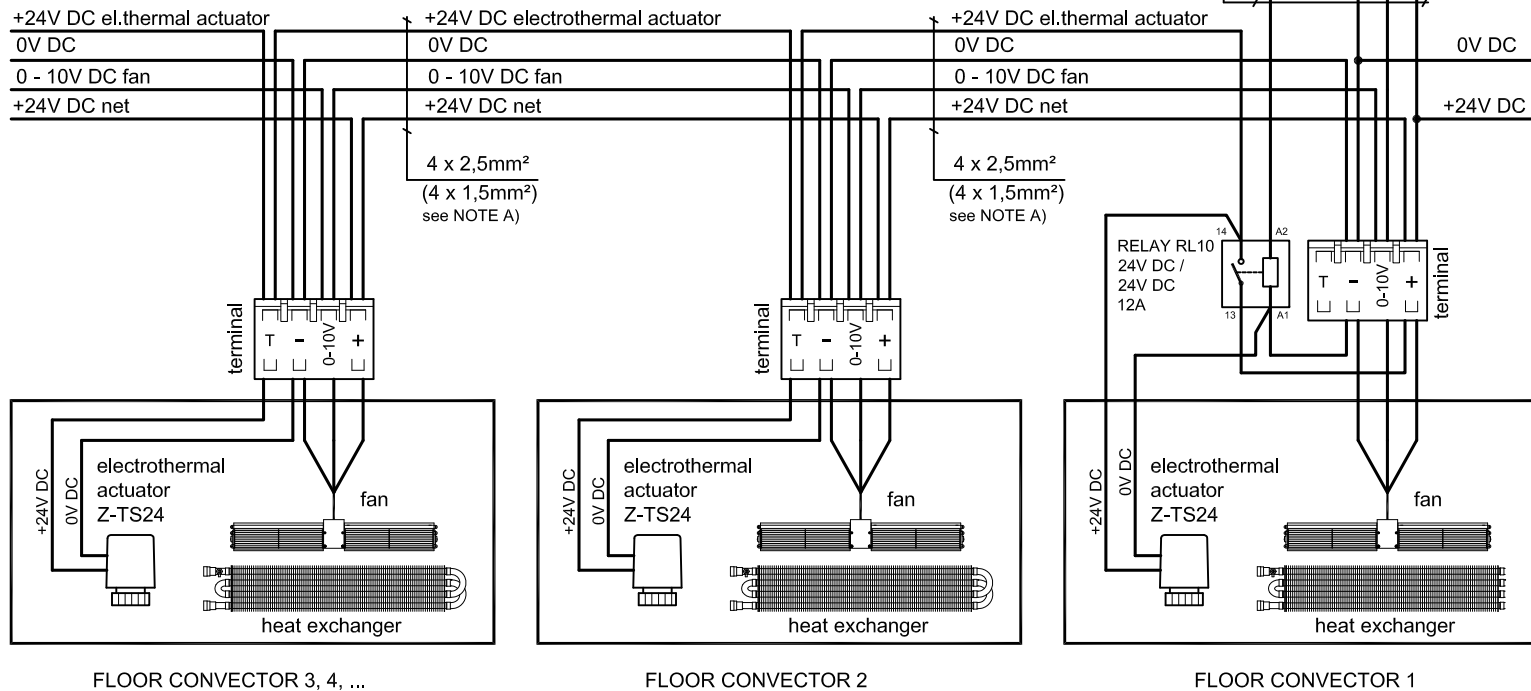


Connection with more than 10pcs of el.therm.actuator Z-TS24
2 PIPE, ONLY HEATING, THERMOSTAT RTD201

DIAGRAM H2-02
ONLY HEATING, 2 PIPE SYSTEM
Version: 20150820

NOTE:

- A) The voltage must not drop below 22 V DC, it is necessary to size the cross sections of conductors correctly according to the calculation SW.
- B) If the capacity of the switching source is insufficient use more power supplies (see DIAGRAM H2-03)

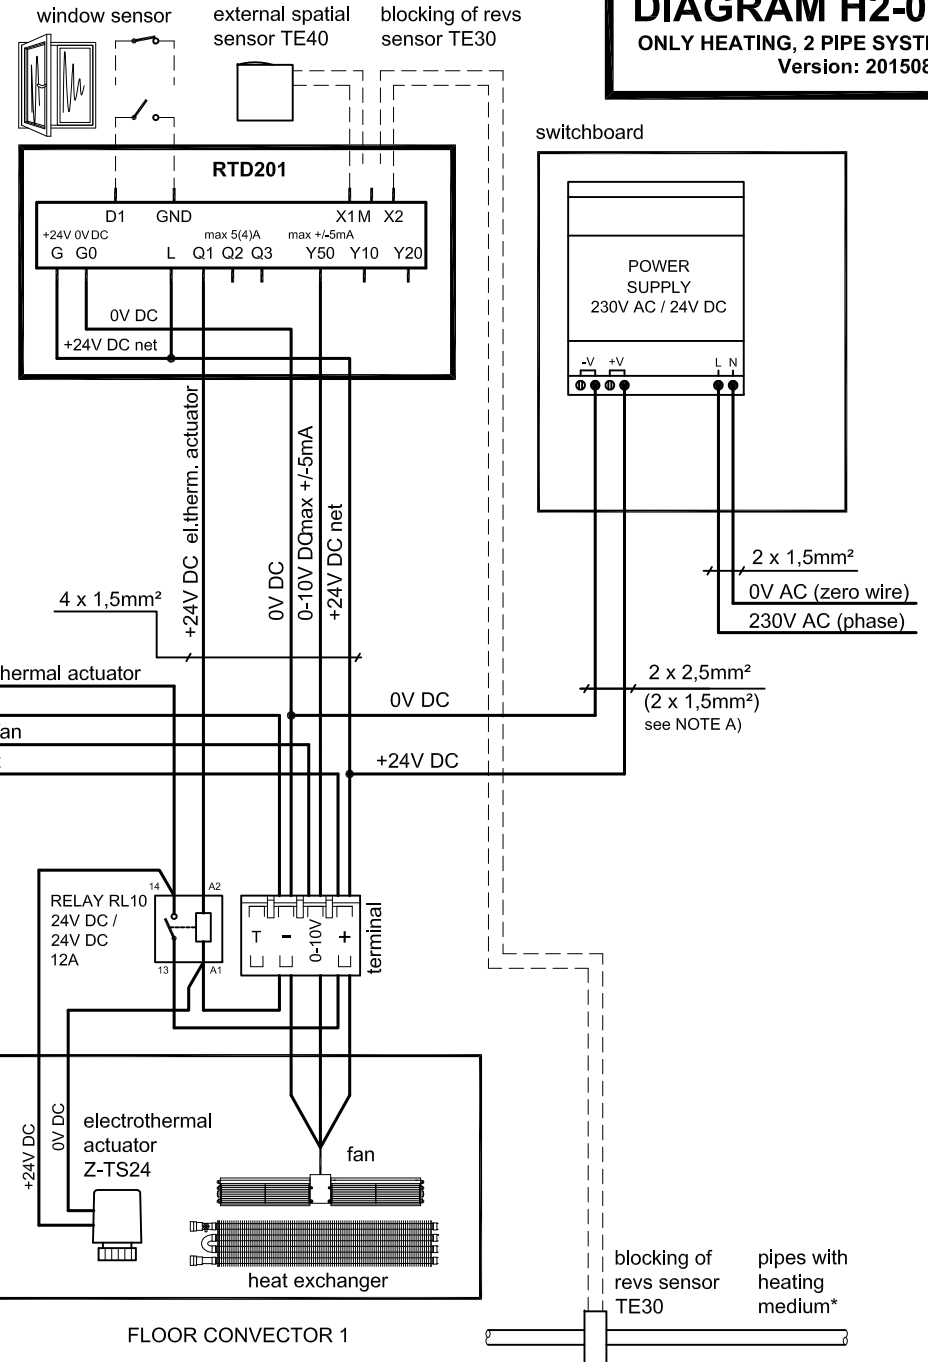

*sensor has to be placed on pipe where the heating medium flow freely - independently to closed pipe branch by electrothermal actuator